


naturen[®]

HYDRO ALCOHOLIC GEL DISPENSER

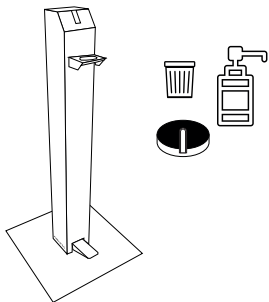


TO WATCH THE INSTALLATION VIDEO, VISIT OUR SITE AT THE FOLLOWING ADDRESS :

www.naturen.pro/en/our-solutions/hydro-alcoholic-gel-dispenser/


1 UNLOCK THE BOTTLE

I UNLOCK THE THE BOTTLE OF HYDROALCOHOLIC GEL BY TURNING THE PUMP COUNTERCLOCKWISE.

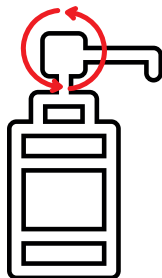

2 PLACING THE BOTTLE

I PLACE THE BOTTLE OF HYDROALCOHOLIC GEL IN THE DISPENSER.




3 INSERTING THE WASHER

I INSERT THE WASHER UNDER THE BOTTLE BY PLACING THE GROOVE ON THE FACE DOWN.



4 HEIGHT ADJUSTMENT

I TURN FROM LEFT TO RIGHT TO GO UP AND FROM RIGHT TO LEFT TO GO DOWN. BE SURE TO ADJUST SO THAT THE TOP OF THE BOTTLE LIGHTLY TOUCHES THE INNER COVER OF THE GEL DISPENSER.

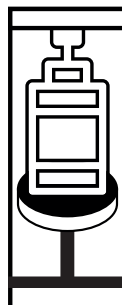

5 PRIMING OF THE BOTTLE

I STEP ON THE PEDAL AND PRIME THE BOTTLE UNTIL THE GEL COMES OUT ABOVE THE CUP IN MY HANDS.

